

Open cooling towers

Options and accessories

Remote sump connection



To **protect sump water from freezing** you can use an auxiliary remote sump within a heated space.

Using a remote sump

- guarantees year-round reliable operation
- helps improve system hygiene

Just follow some simple guidelines when [selecting your remote sump tank](#) for a VT0/1 cooling tower. The [following data](#) will help you calculate the cooling tower volume, the system piping volume and the system component volume.

Want to use a remote sump? Contact your [local BAC representative](#) for guidance.