

Electrical panel heater

Adiabatic cooling

Options and accessories

Electrical panel heater



The default electrical panel is equipped to be installed in ambient temperatures that go down to -10°C . For climates where the ambient temperature can become even lower, an electrical heater can prevent damage to the internal components inside the electrical panel for ambient temperatures as low as -40°C .

Want to install a TVFC in a climate with ambient temperatures as low as -40°C ? Contact your [local BAC representative](#).